



Yönelticiyi PPPoE Sunucusu Olarak Ayarlama

Vigor2952 (DrayOS), Vigor3220 (DrayOS), Vigor2960 (Linux), Vigor300B (Linux) ve Vigor3900 (Linux), LAN müşterileri için PPPoE sunucusu olabilir. Bu, Ethernet ağındaki LAN istemcileri bağlantısını PPP Authentication ile güvenli hale getirebilir. Ayrıca, Network Administrator, LAN istemcilerine bağlantı süresi sınırı ve veri kotası uygulayabilir. Bu makale, PPPoE işlevinin nasıl etkinleştirileceğini ve LAN istemcileri girişi için kullanıcı profillerinin nasıl eklendiğini gösterir.

DrayOS

1. LAN >> PPPoE Server'e gidin, PPPoE Server'i etkinleştirin ve PPPoE istemcilerine atanacak Primary DNS ve Secondery DNS'yi girin, kaydetmek için OK'a tıklayın.

oE Server		
PPPoE Server:	Disable	Enable
Primary DNS:	8.8.8	
Secondary DNS:	8.8.4.4	

2. User Management>>User Profile'e gidin, bir kullanıcı hesabı oluşturmak için uygun bir profile tıklayın.

ser Profile	e Table					Set to Factory Default
Select	All	Clear All				Search
Profile	Enable		Name	Profile	Enable	Name
1.	(4)		admin	17.		
2.	1	1	Dial-In User	18.		
3.				<u>19.</u>		
4.				20.		
<u>5.</u>				<u>21.</u>		
6.				22.	8	

3. Profili aşağıdaki adımları takip ederek düzenleyin:

- a. Enable this account.
- b. Username ve Password girin, password onaylayın.
- c. (İsteğe bağlı)Idle Timeout değiştirin ve bu profili Schedule ile ilişkilendirin.
- d. (İsteğe bağlı)Bu profile sınırlamalar uygulayın.
- e. (İsteğe bağlı) MAC Address Binding etkinleştirme, istemcinin MAC adresini doldurma ve bağlama,bu profilin belirli bir cihazla sınırlı kalmasına neden olabilir.
- f. DHCP Subnet belirtin veya Static IP Address verin,Router,bu tür bir profille kullanıcı oturumuna tam IP adresini atayacaktır.
- g. Profili kaydetmek için OK'a tıklayın.





User Management >>User Profile

Enable this account a second because	
Username	DrayTek (Only support A-Z a-z 0-9 @)
Password	
Confirm Password	
External Server Authentication	None V
Login Settings	
Allow Authentication via	🖉 Web 🖉 Alert Tool 🖉 Telnet
Show <u>Landing Page</u> After Login	
Idle Timeout	10 min. (0: Unlimited)
Auto Logout After	0 min. (0: Off)
Pop up Time-Tracking Window	
Login Permission Schedule	None v , None v , None v , None v
Policy	
Max. Login Devices	0 (0: Unlimited)
Enable Time Quota	0 min. <u>- 0 +</u>
Enable Data Quota	0 MB 🔻 - 0 +
Reset Quota Automatically To	Time Limit 0 min. Data Limit 0 MB
When	 Login Permission Schedule Ends <u>Schedule</u> None Starts
PPPoE Login Settings	
PPPoE MAC Bind	🔍 Enable 🔹 Disable
MAC Address	00 : 00 : 00 : 00 : 00 : 00
DHCP From	
Static IP Address	0.0.0.0 (optional)
Other Services	
Allow this profile to be used by	Internal RADIUS Local 802.1X
Log	None 🔻





PPPoE İstemcisi Bağlantısı

1. Windows PC'de Start>>Settings>>Network&Internet >>Dial-up'a git,"Set up a new connection" a tıkla.

	← Settings		-	- 🗆 X	
	KINTERNET		Find a setting	٩	
	Wi-Fi	D: 1			
	Airolana mada	Dial-up			
	Airpiane mode	Set up a new connection			
	Data usage				
	VPN	Related settings			
	Dial-up	Change adapter options			
	Ethernet	Network and Sharing Cer	nter		
	Luienet	Internet options			
	Ргоху	Windows Firewall			
2. "Connect to the Internet"	'i seç,Next'e tıkla.				
				×	
	← 👙 Set Up a Connection or Networ	k			
	Choose a connection option	n			
	Set up a broadband or dial-	up connection to the Inter	net.		
	Set up a new network				
	Set up a new router or acces	is point.			
	Manually connect to a wirele	ess network			
	Connect to a hidden network	k or create a new wireless	profile.		
	Connect to a workplace				
	Set up a dial-up or VPN con	nection to your workplace.			
			Next	Cancel	
3. Broadband(PPPoE)'vi se	с.				
	3		— (×	
	← ← ◆ Connect to the Internet				
	How do you want to connec	ct?			
	Broadband (PPPoE)				
	Connect using DSL or cable	that requires a user name	and password.		
	Connect using a dial-up more	dem or ISDN.			
				Cancel	





- 🗆 🗙

4. Step 3'de yapılandırılmış şekilde username ve password girin, ardından "connect" e tıklayın.

		← 🐵 Connect to the Inte	ernet	
		Type the informa	tion from your Internet service provider (ISP)	
		User name:	DrayTek	
		Password:	••••	
			Show characters Remember this password	
		Connection name:	Broadband Connection	
		Allow other pe This option all	tople to use this connection ows anyone with access to this computer to use this connection.	
		I don't have an ISP		
			Connect Cancel	
5.	Bağlantının kurulmasını bekley	/in.		
		6 Gannart to the land	X	
		Connection to Pro	ener	
		Connecting to Bro	addand Connection	
		1	l 🥥	
			Verifying user name and password	
			give court	
			Skip Cancel	1

6. Ve PPPoE istemcisi interneti taramaya başlayabilir.

	-		\times
← ◆ Connect to the Internet			
The connection to the Internet is ready to use			
s 🔮			
To connect to the Internet next time, left-click the network icon in the taskbar and click the connection you just created.			
		Q	lose





2

LİNUX

- 1. LAN>>PPPoE Server >>General Setting'e git,
 - PPPoE Server etkinleştir.
 - (İsteğe Bağlı)LAN istemcilerinin Bruce-Force saldırısı yapmasını önlemek için PPPoE User Isolation etkinleştir.
 - (İsteğe Bağlı)İnternet erişimini yalnızca PPPoE istemcileri ile sınırlandırmak için Deny Internet Access Expect PPPoE User etkinleştir.
 - (İsteğe Bağlı)LAN istemcilerini replay saldırısından korumak için PPPoE Server Authentication Type için "CHAP" kullanın.
 - Ayarları etkinleştirmek için Apply'a tıklayın.
 - LAN >> PPPoE Server >> General Setting

PPPoE Server :	Disable Enable	
PPPoE User Isolation :	Disable Enable	•
Deny Internet Access Except PPPoE User :	Disable	•
Access Concentrator(AC) Name :	v3900	
Service Name :		(Optional)
Primary DNS :	0.0.0.0	
Secondary DNS :	0.0.0.0	
PPPoE Server Authentication Type :	CHAP	v
User Authentication Type :	Local	 (If you use LDAP for PPP Authentication, Authentication Protocol will auto set to PAP)
DHCP Relay :	Disable Enable	•

2. User Management>>User Profile gidin,kullanıcı hesabı oluşturmak için Add'e tıklayın.



- 3. Profili aşağıdaki gibi düzenleyin:
 - Username ve Password girin.
 - Enable kontrol edin.
 - PPPoE Server açın ve PPPoE Server Login için 'Enable'yi seçin
 - Profili kaydetmek için Apply'a tıklayın.





o ser ridille :	demo			
🔽 Enable				
Password :		Strength : Normal	_	
System User :	false 👻		_	
PPTP/L2TP/SSL/PPPoE Se	rver General Setup		_	
Idle Timeout(sec) :	300			
DHCP from :	lan1 👻			
Static IP Address :		(Optional)	E	
· · · · · · · · · · · · · · · · · · ·				
 User Management 				
Oser Management PPTP/L2TP/SSL Server				
Over Management PPTP/L2TP/SSL Server PPPoE Server				
Over Management PPTP/L2TP/SSL Server PPPoE Server PPPoE Server Login :	Enable Disable			
Over Management PPTP/L2TP/SSL Server PPPoE Server PPPoE Server Login : Quota Reset Frequency :	Enable Disable None			
Over Management PPTP/L2TP/SSL Server PPPoE Server PPPoE Server Login : Quota Reset Frequency : Time Quota(min) :	Enable Disable None -1	-1 for unlimited		
Over Management PPTP/L2TP/SSL Server PPPoE Server PPPoE Server Login : Quota Reset Frequency : Time Quota(min) : Current Time Used(min) :	Enable Disable None -1 0	-1 for unlimited		
Over Management PPTP/L2TP/SSL Server PPPoE Server PPPoE Server Login : Quota Reset Frequency : Time Quota(min) : Current Time Used(min) : Traffic Quota(MB) :	Enable Disable None -1 0 -1	-1 for unlimited Reset -1 for unlimited		
Over Management PPTP/L2TP/SSL Server PPPoE Server PPPoE Server Login : Quota Reset Frequency : Time Quota(min) : Current Time Used(min) : Traffic Quota(MB) : Current Traffic Used(MB) :	• Enable None -1 0 -1	-1 for unlimited Reset -1 for unlimited Reset		

4. (İsteğe bağlı) Kullanıcı profilinde, bir zaman ve veri kotası atayabilir veya kullanıcı profilini belirli bir cihaza bağlayabilirsiniz (MAC adresine göre).

✓ PPPoE Server		
PPPoE Server Login :	Enable Disable	
Quota Reset Frequency :	Everyday 👻	
Time Quota(min) :	180	-1 for unlimited
Current Time Used(min) :	0	Reset
Traffic Quota(MB) :	800	-1 for unlimited
Current Traffic Used(MB) :	0	Reset
MAC Binding :	Enable Disable	
MAC Address :	11:22:33:55:88:dd	

- 5. (İsteğe bağlı) PPPoE istemcilerinin ağ saldırısından önlenmesi,
- LAN istemcilerinin brute-force saldırısından korunmasını sağlamak için PPPoE User Isolation etkinleştirin.
- Yalnızca PPPoE istemcilerinin internete erişebilmesini sağlamak için Deny Internet Access Except PPPoE User etkinleştirin.
- LAN istemcilerini replay saldırısından koruyabileceğinden, PPPoE Server Authentication Type için CHAP ,PAP'tan daha iyidir.





Inline Client Status General Setting	History		
PPPoE Server :	Disable	Enable	
PPPoE User Isolation :	Disable	Enable	
Deny Internet Access Except PPPoE Us	er: 🔵 Disable	Enable	
Deny Interface :	lan1	*	
Access Concentrator(AC) Name :	v3900		
Service Name :			(Optional)
Primary DNS :	0.0.0.0		
Secondary DNS :	0.0.0.0		
PPPoE Server Authentication Type :	CHAP	*	
User Authentication Type :	Local	~	(If you use LDAP for PPP Authentication, Authentication Protocol will auto set to PAP)
DHCP Relay :	Disable	Enable	

PPPoE Kullanıcı Bağlantısı

1. Windows PC'de Start>>Setting>>Network&Internet >>Dial-up'a gidin,Set up a new connection'a tıklayın.

× .				
← Settings			-	×
K NETWORK & INTERNET		Find a setting		 Q
Wi-Fi Airplane mode Data usage	Dial-up Set up a new connection	٦		
VPN	Related settings	5		
Dial-up	Change adapter options			
Ethernet	Network and Sharing Ce	enter		
Ргоху	Windows Firewall			





2. Connect to the Internet'i seçin, Next'e tıklayın.

	>	<
	 Set Up a Connection or Network 	
	Choose a connection option	
	Connect to the Internet Set up a broadband or dial-up connection to the Internet Set up a new network Set up a new router or access point. Manually connect to a wireless network Connect to a hidden network or create a new wireless profile. Descent to a workplace Set up a dial-up or VPN connection to your workplace.	
	Next Cance	
3. Broadband(PPPoE) seçin.		
	- X	
	How do you want to connect?	
	Cancel	

4. Step 3'de yapılandırılmış şekilde username ve password girin.Ardından Connect' e tıklayın.

← 🔏 Connect to the Int			\times
Type the informat	ion from your Internet service provider (ISP)		
User name:	demo		
Password:	•••••		
Connection <u>n</u> ame:	Show characters Bemember this password Broadband Connection		
Allow other peo This option allow I don't have an ISP	ole to use this connection s anyone with access to this computer to use this connection.		
	Connect	Ca	ancel





5. Bağlantının kurulmasını bekleyin.

