



## Harici Hotspsot Portal Sunucusu Olarak Purple WiFi Kullanın

DrayOS'daki Hotspot Web Portalı fonksiyonu, Authentication yöntemlerini destekler. Bu makalede, Hotspot Web Portalı fonksiyonunda External Portal Server olarak Purple WiFi'nin nasıl ayarlanacağını göstereceğiz .Böylece hotspot istemcilerinizin Purple WiFi'deki sayfayı ziyaret ederek internete erişebileceklerini ve oturum açma kullanıcılarını yönetebileceklerini Purple WiFi ayarları üzerinden göstereceğiz. Kurulumdan önce, bir Purple WiFi hesabına kaydolmanız gerekir.

1. Purple WiFi'ye gidin ve hesabınızla giriş yapın.

2 . Management > Venue/Location > Venues and Groups sekmesine gidin, ardından Venue/Location > Hardware sekmenizin adını seçin . V2862'nin MAC adresini sisteme ekleyin, açılır listeden uyumlu cihazı seçin; yapılandırma kılavuzunu görüntülemek veya indirmek için seçenekleri göreceksiniz.

Details Hardw	Access Metho	ds Linked Networks	Settings		
+					Save details
Edit your hardware	2				
Name				Vigor 2862 Series	
Hardware type				Vigor 2862 Series	¥
Hardware Mac Ad	dress				
					View Manual Online Download Manual

3. Router'in yönetim sayfasına geri dönün. Router'in internete bağlandığından emin olun.

Online Status					
Physical Connection				Sy	stem Uptime: 0day 0:14:15
	IPv4		IPv6		
LAN Status					
IP Address	TX Packets	RX Pa	ckets	Router Primary DNS:	Router Secondary DNS:
192.168.15.1	4,822	1,634		8.8.8.8	8.8.4.4
WAN 1 Status					
Enable	Line	Name	Mode	Up Time	
Yes	ADSL			00:00:00	
IP	GW IP	TX Bytes	TX Rate(bps)	RX Bytes	RX Rate(bps)
	5 <u>-112</u> 9	0 (B)	0	0 (B)	0
WAN 2 Status					>> <u>Release</u>
Enable	Line	Name	Mode	Up Time	
Yes	Ethernet		DHCP Client	0:06:02	
IP	GW IP	TX Bytes	TX Rate(Kbps)	RX Bytes	RX Rate(Kbps)
192.168.1.12	192.168.1.1	1520 (KB)	108.91	315 (KB)	14.96





4. Hotspot Web Portal >> Profie Setup'a gidin, profili düzenlemek için uygun bir dizine tıklayın.

Hotspot Web Portal >> Profile Setup

Index	Enable	Comments	Login Mode	Applied Interface	
1.			Click-through	None	Preview
<u>2.</u>			Click-through	None	Preview
<u>3.</u>			Click-through	None	Preview
4.			Click-through	None	Preview

Note:

1. The router must connect to the Internet before webpage redirection will work.

- 2. If the LAN clients are using another DNS server on LAN, please make sure the DNS query for domain name "portal.draytek.com" will be resolved by the router.
  - OK
- 5. Profili ayarlamak için 6 adım:
  - a. İlk önce, bu profili etkinleştir.
  - b. Profili belirlemek için bir comment ver.
  - c. Portal Method için "External Portal Server "i seçin.
  - d. Captive Portal URL'sinde Draytek Vigor 2862 Series'in kılavuzunda verilen "External Server URL" değerini girin.
  - e. Kılavuzu takip edin ve MAC Adres Formatını "AA-BB-CC-GG-EE-FF" olarak değiştirin. f. Save and Next'e tıklayın.

Comments: purple	
Portal Server	
Portal Method Captive Portal URL Redirection URL	<ul> <li>Skip Login, landing page only</li> <li>Click through</li> <li>Various Hotspot Login</li> <li>C.          <ul> <li>External Portal Server</li> </ul> </li> <li>https://<url> <ul> <li>http://              <ul> <li>portal.draytek.com</li> </ul> </li> </ul></url></li></ul>
Authentication Method RADIUS MAC Authentication MAC Address Format	External RADIUS Server  Enable  AA-BB-CC-DD-EE-FF





6. Adım 1 -Login Method'a geri dönün, Authentication Method'da External RADIUS Server bağlantısını tıklayın.

1 Login Method	2 Background	3 Login Page Setup	4 Whitelist Setting	5 More Options	
Comments: purple					
Portal Server					
Portal Method	<ul> <li>Skip L</li> <li>Click tl</li> <li>Variou:</li> <li>Extern</li> </ul>	ogin, landing page only nrough s Hotspot Login al Portal Server			
Captive Portal URL	https://	<url></url>			
Redirection URL	http:// 🔻	portal.draytek.com			
Radius Server					
Authentication Method	External R	ADIUS Server			
RADIUS MAC Authenticatio	n Enable	-DD-EE-EE ¥			
in ter the test of the					

- 7. Bağlantı sizi Application >> RADIUS/TACACS+ 'a yönlendirecektir . Kurulum için 4 adım:
  - 1. Bu profili etkinleştir.
  - 2. Kullanım kılavuzu tarafından Server IP Address/Hostname bölümünde verilen "Server IP Address" i girin.
  - 3. Kullanım kılavuzundan yararlanarak Shared Secret ve Confirm Shared Secret 'e değerleri giriniz.
  - 4. Profili kaydetmek için OK'a tıklayın.

## Applications >> RADIUS/TACACS+

a. 🗹 Enable					
Server IP Ac	ldress/Hostname	b.	<ipaddr< td=""><td>ess&gt;</td><td>Advanced</td></ipaddr<>	ess>	Advanced
Destination	Port		1812		
Shared Secr	et	C.	•••••		
Confirm Sha	red Secret				
Enable Accord	ounting				
Accounting I	Port		1813		
Disconnect I	lessage Port		3799		
Update Inte	rval		10	Min(s)(1	0~1440)
RADIUS Serve	r Status Log				
<u>Refresh</u>	Clear				

PPP General Setup, and select 'PAP Only' for 'Dial-In PPP Authentication'.

d. OK Clear Cancel





- 8. Hotspot Web Portal >> Profile Setup >> Whitelist Setting'e gidin . Desk Domain sekmesini seçin ve Purple Portal'daki kullanım kılavuzunda verilen talimatlarda listelenen 4 domaini girin , ardından Save and Next'e tıklayın.
  - .region3.purpleportal.net
  - .cloudfront.net
  - .venuewifi.com
  - .openweathermap.org



		a.				
NAT Rul	es	Dest Domain	Dest IP		Dest Port	Source IP
Index	Enable	Destination Domain Whitelist	Index	Enable	Destination Domain	Whitelist
1	<b>b</b> .	*. <domain></domain>	2	۲	*. <domain></domain>	
3		*. <domain></domain>	4		*. <domain></domain>	
5			6			
7			8			
9			10			
11			12			
13			14			
15			16			
17			18			
19			20			
21			22			
23			24			
25			26			
27			28			
29			30			
í — — — — — — — — — — — — — — — — — — —						

## Note:

Besides the whitelist edited above, there are other domains allowed for Social Logins and captive portal detection (only effective when corresponding login option enabled). Expand to see full list







- 9. More Options sayfasında, aşağıdaki yapılandırmaları yapın:
  - a. HTTPS Redirection: Disable
  - b. Captive Portal Detection: Enable
  - c. Landing Page After Authentication: Fixed URL ve kılavuz tarafından sağlanan URL'yi girin
  - d. Applied Interfaces:Purple WiFi servisini etkinleştirmek istediğiniz SSID (s) 'i seçin. e. Finish'e tıklayın

Login M	athed					
RADIUS	eniou	Quota Policy Profile	Valid Time	Device Allowed	Bandwidth Limit	Session Limit
	Login	1.Default *	Od 5h Om	Unlimited	Unlimited	Unlimited
Note:						
To modif	y the quot	a settings, please go to Hot	spot Web Portal	>> Ouota Manageme	ent	
Neb Por	tal Optior	15				
HTTPS	Redirect	ion a. Enable				
		When an u	nauthenticated d	lient opening a HTTPS	page, redirect will work	cbut
		certificate e Disable thi	strors may be shi s function to redir	wn ect only HTTP pages	HTTPS browsing will fin	Teout
		without red	irection and also	no certificate errors.		
Captiv	e Portal D	Detection b. @ Enable				
			and the second second second second second	character and an anti-ally	non-un the Web Portal	0.000
and other in		Trinner the	una mentrated			
anding	Page Afte	Trioner the er Authentication	Insidenticated	Fighter III an er af totele same		
ending	Page Afte	er Authentication	uniementration	Fallen III and a falle and		
<ul> <li>Fixer</li> <li>User</li> </ul>	Page Afte	trinner the er Authentication	1014 Cheotreased			
<ul> <li>e Fixed</li> <li>O Used</li> <li>O Bulk</li> </ul>	Page Afte	ar Authentication	inia menicated			
<ul> <li>Fixed</li> <li>User</li> <li>Bulk</li> </ul>	Page Afte d URL ht Requeste din Messa	ttps:// <url></url>		Found (11) on any Constrained		
Fixer     User     Bulle	Page Afte I URL ht Requeste	Throase the           ar Authentication           ttps:// <ur>         url&gt;           dd URL           go         Html</ur>				
Fixer     User     Bulle	Page Afte d URL ht Requeste tin Messa	ttps:// <ur></ur>				
Fixed     Fixed     User     Bulle	Page Afte d URL ht Requeste	trionale the er Authentication ttps:// <uri> duRL go Hitti +</uri>				
Fixer     Fixer     User     User     Ma	Page Afte d URL ht Requeste tin Messa	radees)			Dofault Messa	190
Fixer     Fixer     User     User     (Ma     Note:	Page Afte d URL h Requeste tin Messa	racters)			Default Messa	190
Foxer     Coser     Go User	Page After d URL ht Requester tin Messa x 511 cha	racters)	when using OS b	uilt-in Capitive Portal D	Dofault Messa	90
Fixer     Fixer     User     User     Guile     Gui	Page After d URL ht Requester tim Messa x 511 cha ing Page r	racters)	when using OS bi	uilt-in Captive Portal D	Default Messa	nge
Fixer     Fixer     User     User     User     Ma     Ma     Note     Landi	Page After d URL ht Requester tim Mossa x 511 chai ng Page r	Troneer the Tracters) Tacters) Tracters) Tracters)	when using OS b	uilt-in Captive Portal D	Default Messa	nge
Fixed     Fixed     User     G     User     G     User     Ma     Note     Landi  Applied	Page After d URL ht Requester tim Messar x 511 cha ng Page r Interfaces d.	Trover the r Authentication ttps://curl> d URL gp [Hmi +] racters) nav not be shown connectly vi g [LAN1 ] [LAN2 ]	when using OS b	uilt-in Captive Portal D	Default Mensor election. 46 © LAN7 © LAN	nge 18
Fixer     Fixer     User     User     Ma     Ma     Note:     Land  Applied I  Subnet WLAN	Page After d URL ht Requester tim Messa ax 511 cha ing Page r Interfaces d. 2.4G	Traver the r Authentication ttps://curl> d URL go Hend + racters) readers) readers) readers) setup (LAN2   LAN2   SETUP (ConcyrRed) SETUP (ConcyrRed)	when using OS b	uilt-in Captive Portal D	Default Messa etection.	18
Applied 1     Subnet	Page After d URL ht Requester tim Messa x 511 cha ng Page r Interfaces d, 2.4G	Torone the           rr Authentication           ttps://curl>           d URL           go           Hind           radies:)           markers:)           markers:)           SISD1 (DrayTek)           SISD2 (DrayTek)           SISD2 (DrayTek)	when using OS b LAN3 © LAN4 est)	ailt-in Captive Portal D	Default Messa etection.	<b>1</b> 6
Anding Foxes User Bulle (Ma Note Landi Subnet Subnet	Page After d URL ht Requester tim Messa ax 511 cha ng Page r Interfaces d. 2.4G	Trover the r Authentication ttps:// <ur> dt URL go Him • actiens) actiens) * LANL © LAN2 SSID1 (DrayTek) SSID2 (DrayTek) SSID2 (DrayTek) SSID2 (DrayTek) SSID2 (DrayTek)</ur>	when using OS b LAN3 CANN est)	all-in Captive Portal D 4 LANS LAN	Default Messa etection.	999
ending Fore User (Ma Mote Landi Subnet VVLAN	Page After d URL ht Requester tim Messa ax 511 cha ng Page r Interfaces d. 2.4G	Tropert the r Authentication ttps:// <ur></ur>	when using OS b LAN3 I LAN est)	uilt-in Captive Pontal D 4 ELANS ELAN	Default Messa extection.	18
Anding Foxe User (Ma And Landi Subnet VVLAN	Page Afte d URL ht Requeste tin Messa as 511 cha ng Page r Interfaces d, 2.4G	Toroard the           r Authentication           ttps:// <ul> <li>duite.</li> <li>duite.</li> <li>ge           refutes           refutes           refutes           states           Stato (Cray Tek)           Stato (Cray Tek)</li></ul>	when using OS b LAN3 I LAN est)	uiten Captive Ponal D 4 0 LANS 0 LAN	Default Messa etection. 46 IAN7 IAN	10
Anding Foor User And Note Landi Subnet WLAN	Page Afte URL ht Requeste ax 511 cha ng Page r interfaces d. 2.4G 5G	Troored the r Authentication ttps://curl> dt UR	when using OS br LAN3   LAN4  LAN4 est)	uit-in Captive Portal D	Default Messa election. 46 © LANZ © LAN	9990 10



